




COMMERCIAL GAS SERVICE PARTS LIST

State Water Heater Parts Fulfillment
125 Southeast Parkway • Franklin, TN 37068
www.statewaterheaters.com • 1-800-821-2017

**MODELS:
SUF 60-120 through SUF 100-250
SERIES 100/101**


DISPLAY CONTROL ASSEMBLY
See Page 2

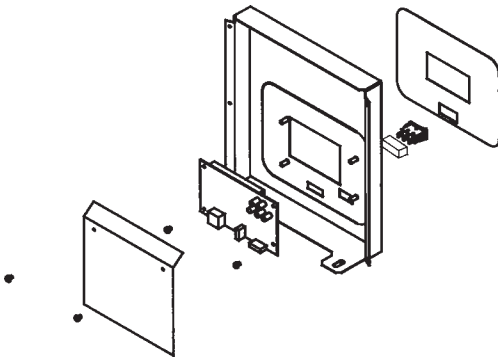


SUF 60-120 through SUF 100-240
See Page 2




INNER COVER CONTROL ASSEMBLY
See Page 3

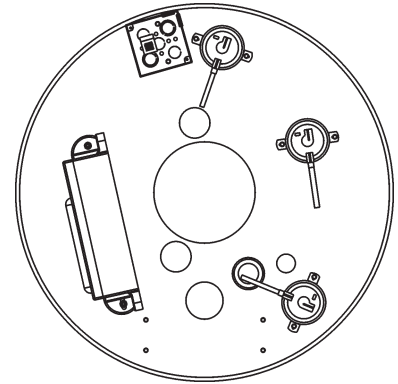

BLOWER/BURNER ASSEMBLY
See Page 4 & 5

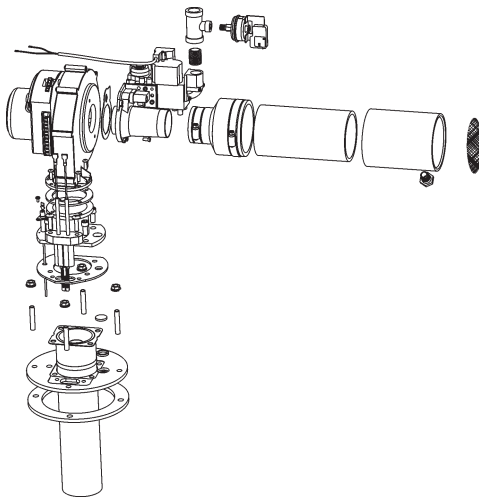


GAS VALVE
See Page 6

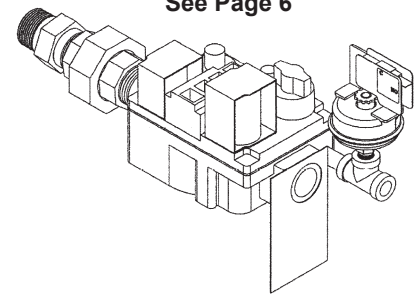

ELECTRONIC ANODE
See Page 8





EXHAUST ELBOW ASSEMBLY - VENT KIT ASSEMBLY
See Page 7

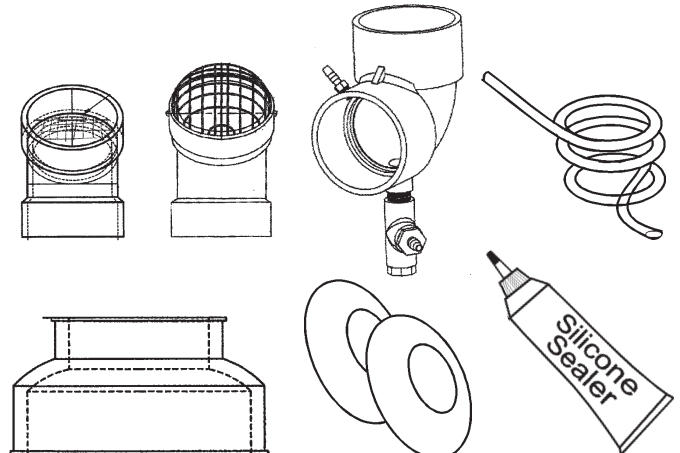

CLEANOUT ASSEMBLY/TEMPERATURE & PRESSURE VALVE


		SUF 60 120/A	SUF 100 150/A	SUF 100 199/A	SUF 100 250/A
Item	Description	100/101	100/101	100/101	100/101
1	Cleanout Gasket.....	9004099015.....	9004099015.....	9004099015.....	9004099015.....
2	Cleanout Plate.....	9004098005.....	9004098005.....	9004098005.....	9004098005.....
3	T & P Valve.....	9005903205.....	9005903205.....	9005903205.....	9005903205.....

Standard hardware items may be purchased locally.

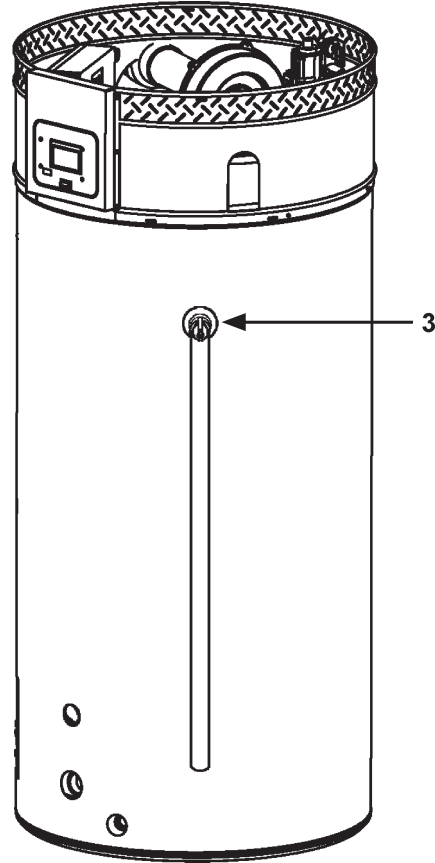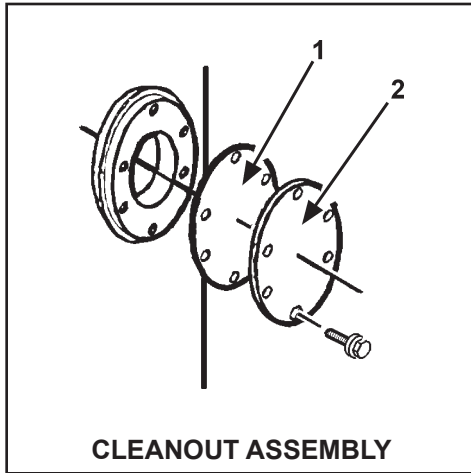

DISPLAY CONTROL ASSEMBLY

		SUF 120/A	SUF 150/A	SUF 199/A	SUF 250/A
Item	Description	100/101	100/101	100/101	100/101
1	SUF Display Overlay.....	197759-000.....	197759-000.....	197759-000.....	197759-000.....
2	On/Off Switch.....	192699-000.....	192699-000.....	192699-000.....	192699-000.....
3	Switch Wire Connection.....	197758-000.....	197758-000.....	197758-000.....	197758-000.....
4	Display Panel.....	197777-000.....	197777-000.....	197777-000.....	197777-000.....
5	User Interface Module - UIM.....	9006240005.....	9006240005.....	9006240005.....	9006240005.....
6	Splatter Shield.....	197763-000.....	197763-000.....	197763-000.....	197763-000.....

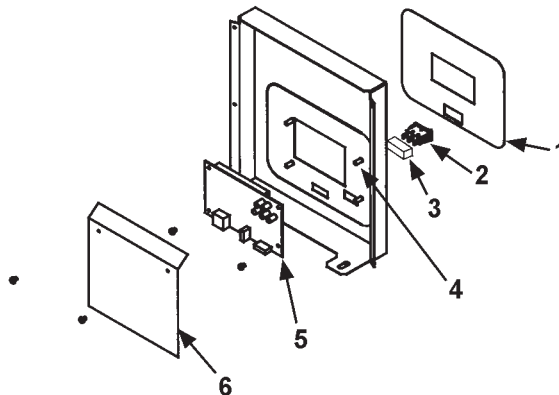


INNER COVER CONTROL ASSEMBLY - 120/A & 150/A

Item	Description	SUF 120/A		SUF 150/A	
		100	101	100	101
1	Controller	9006262005.....	9006266005.....	9006263005.....	9006267005
2	Switch-prover	9006280015.....	9006280015.....	9006280015.....	9006280015
3	Switch-inlet.....	9006288015.....	9006281015.....	9006288015.....	9006281015
4	Switch-blocked outlet	9006287015.....	9006287015.....	9006289015.....	9006287015

INNER COVER CONTROL ASSEMBLY - 199/A & 250/A


Item	Description	SUF 199/A		SUF 250/A	
		100	101	100	101
1	Controller	9006264005.....	9006268005.....	9006265005.....	9006269005
2	Switch-prover	9006280015.....	9006280015.....	9006280015.....	9006280015
3	Switch-inlet.....	9006288015.....	9006281015.....	9006281015.....	9006281015
4	Switch-blocked outlet	9006289015.....	9006282015.....	9006282015.....	9006282015

Standard hardware items may be purchased locally.

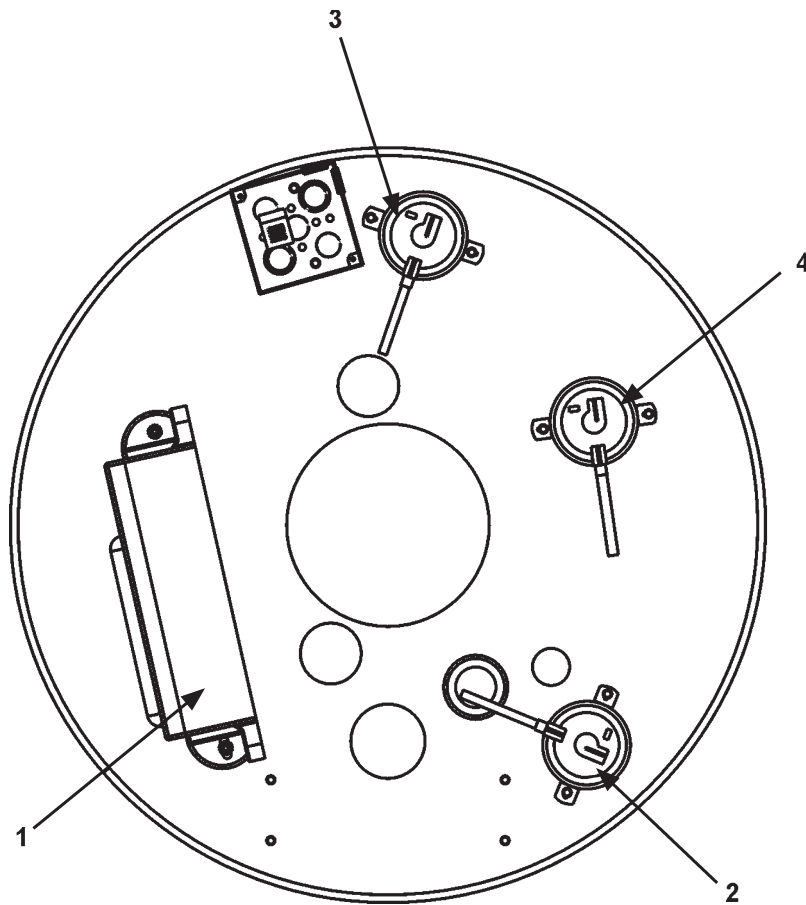


BURNER/BLOWER ASSEMBLY - 120/A & 150/A

Item	Description	SUF 120/A		SUF 150/A	
		100	101	100	101
1	Blower	9006272005.....	9006272005.....	9006273005.....	9006273005
2	Burner.....	9006275005.....	9006276005.....	9006277005.....	9006278005
3	Burner Flange.....	197256-000.....	197256-000.....	197256-000.....	197256-000
4	Burner Gasket.....	197257-000.....	197257-000.....	197257-000.....	197257-000
5	Condensate Tee	181865-000.....	181865-000.....	181865-000.....	181865-000
6	Coupling-Power Vent.....	9006107205.....	9006107205.....	9006107205.....	9006107205
7	Flame Sensor.....	9006106205.....	9006106205.....	9006106205.....	9006106205
8	Flange Gasket.....	194817-000.....	194817-000.....	194817-000.....	194817-000
9	Hose Barb 1/2" x 1/4"	181863-000.....	181863-000.....	181863-000.....	181863-000
10	Igniter	9006101205.....	9006101205.....	9006101205.....	9006101205
11	Observation Window	9006102215.....	9006102215.....	9006102215.....	9006102215
12	Screen Wire.....	9006027015.....	9006027015.....	9006027015.....	9006027015
13	Stud 5-16-18 x 1 3/4"	196881-000.....	196881-000.....	196881-000.....	196881-000
14	Truss Hd Machine Screw 1/4-20 x1.00".....	194816-000.....	194816-000.....	194816-000.....	194816-000
15	Viewport Gasket.....	9006103215.....	9006103215.....	9006103215.....	9006103215

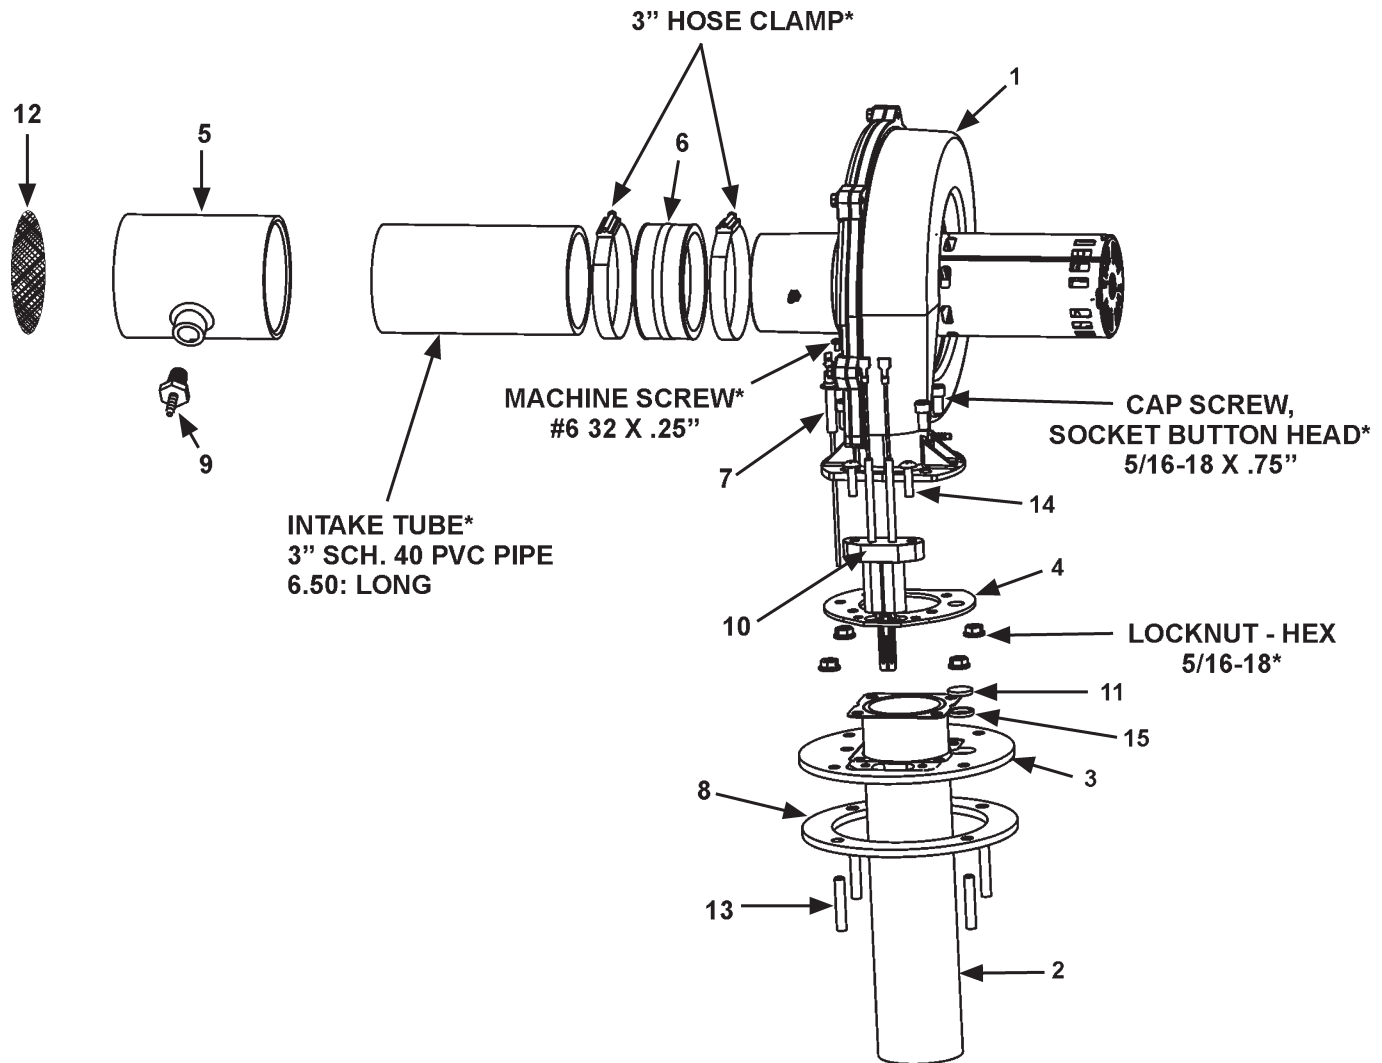


BURNER/BLOWER ASSEMBLY - 199/A & 250/A

Item	Description	SUF 199/A & 250/A	
		100	101
1	Blower Assembly	9006274005	9006274005
2	Burner	9006279005	9006279005
3	Burner - Adapter	197607-000	197607-000
4	Burner - Gasket A	197618-000	197618-000
5	Burner Flange	197611-000	197611-000
6	Burner - Gasket B	197257-000	197257-000
7	Condensate Tee	181865-000	181865-000
8	Flame Sensor	9006106205	9006106205
9	Flange - Gasket	194817-000	194817-000
10	Gas Valve - Venturi Assembly	9006285005	9006286005
11	Hose Barb	181863-000	181863-000
12	Igniter	9006101205	9006101205
13	Intake Connector	197604-000	197604-000
14	Low Gas Switch	9006255015	9006256015
15	Observation Window	9006102215	9006102215
16	Stud 5/16-18 x 1 3/4"	196881-000	196881-000
17	Truss Hd Machine Screw 1/4-20 x 1.00	194816-000	194816-000
18	Venturi Gasket	197789-000	197789-000
19	Venturi Mounting Screw	197790-000	197790-000
20	Viewport Gasket	9006103215	9006103215
21	Wire Screen	9006027015	9006027015

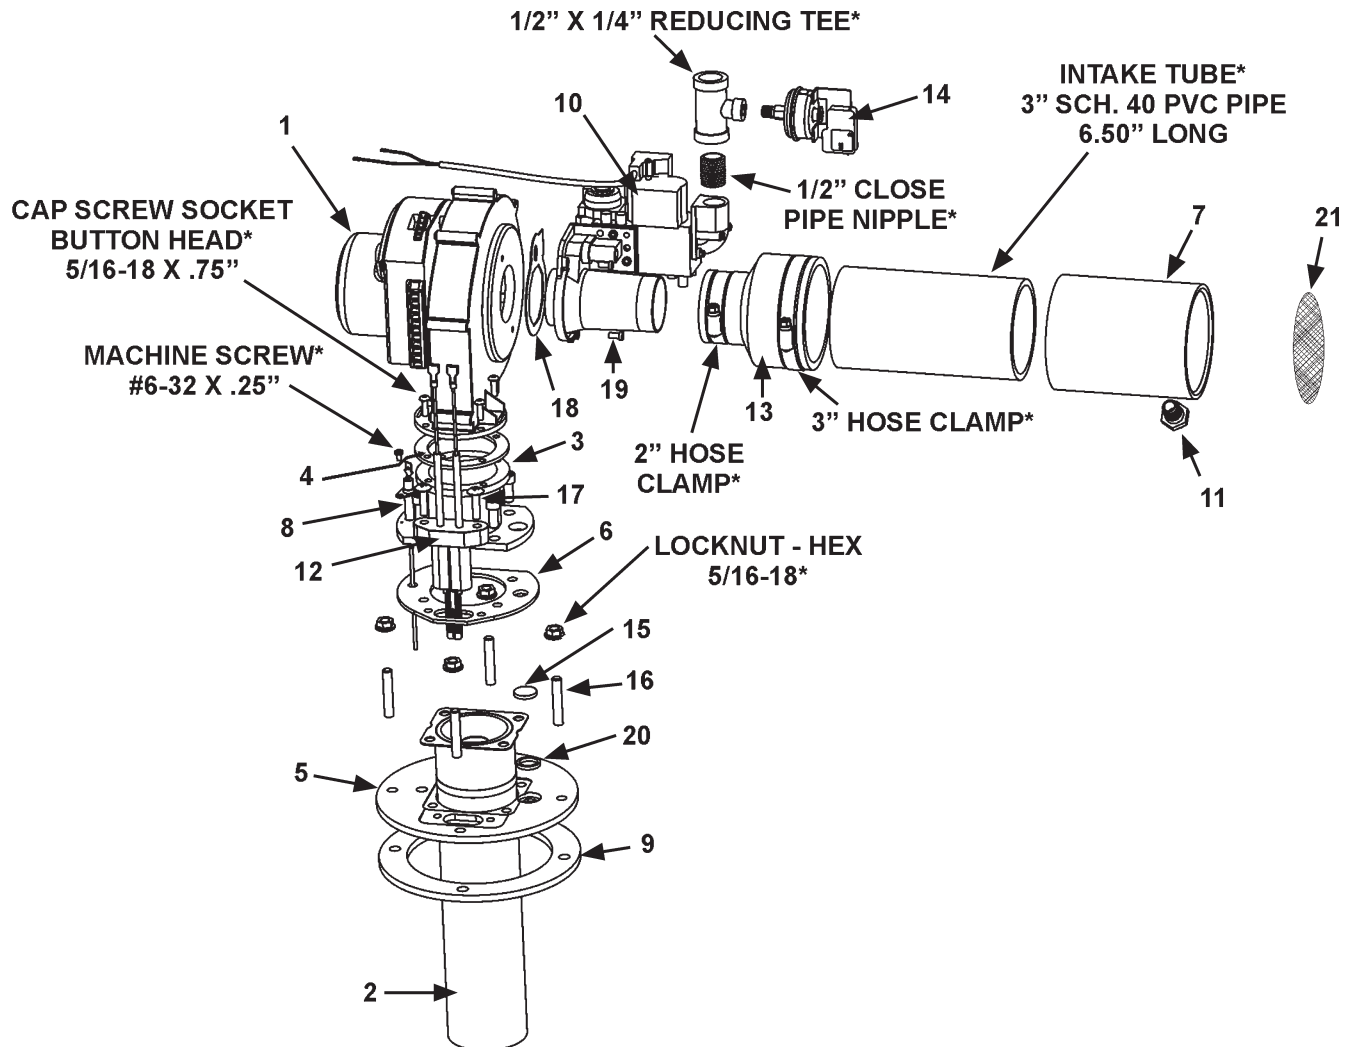


GAS VALVE ASSEMBLY - 120/A

Item	Description	SUF 120/A	
		100	101
1	Gas Valve	9004535205.....	9004536205
2	Orifice	9006259015.....	9006257015
3	Orifice Holder	9006094215.....	9006094215
4	Switch - Low Gas Pressure.....	9006256015.....	9006255015

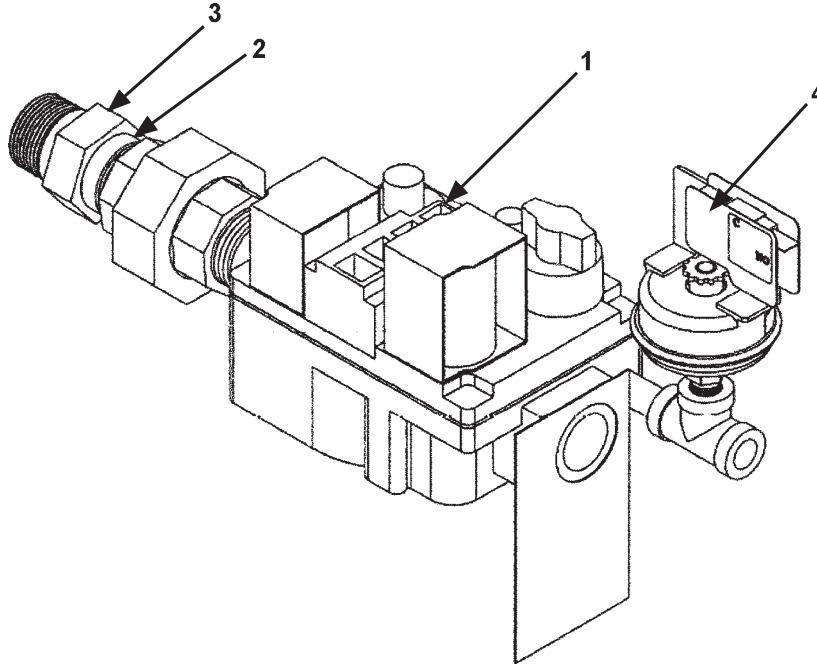

GAS VALVE ASSEMBLY - 150/A

Item	Description	SUF 150/A	
		100	101
1	Gas Valve	9006283005.....	9006284005
2	Orifice	9006260015.....	9006258015
3	Orifice Holder	9006094215.....	9006094215
4	Switch - Low Gas Pressure.....	9006256015.....	9006255015

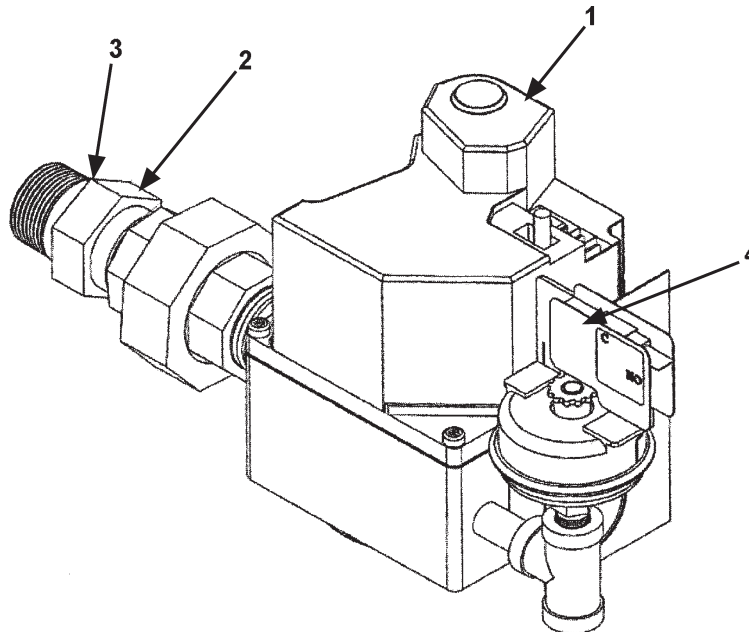


EXHAUST CONNECTOR ASSEMBLY - 120/A - 250/A

SUF 120/A - 250/A

100/101

Item	Description	100/101
1	Exhaust Connector.....	9006157205
2	Exhaust Elbow Assembly.....	9006261005
3	Tubing - Condensate.....	9006110215

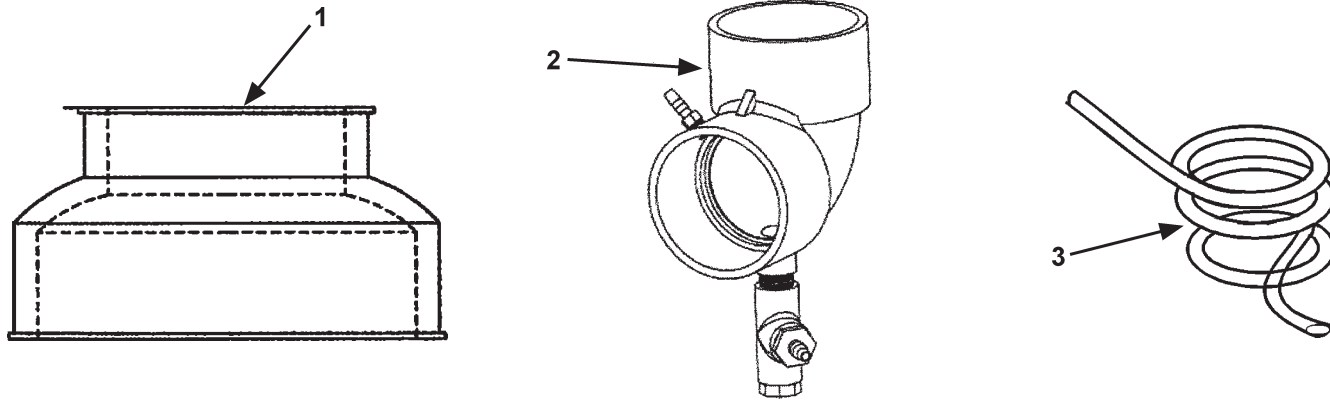

VENT KIT ASSEMBLY - 120/A - 250/A

SUF 120/A - 250/A

100/101

Item	Description	100/101
1	Exhaust Screen.....	9006027015
2	Intake - Screen Collar Assembly.....	182162-000
3	PVC 45 Degree Elbow.....	181901-000
4	Silicone.....	9004366105
5	Wall Plate.....	9004364105

